



## Go full screen

Go full screen from Home by holding your hands open and uniformly outstretched and “gripping” the sides of the current window. Move your hands apart to go full screen.

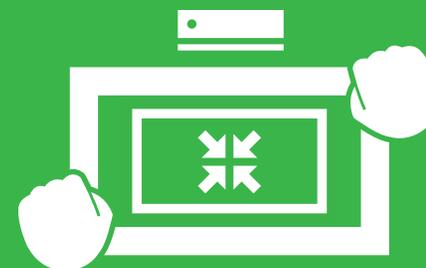


## Return Home

From full screen you can go Home by shrinking the picture. Hold your hands outstretched with hands open and then “grip” the sides of the screen to form a fist. Move your hands together “squeezing” the screen together.

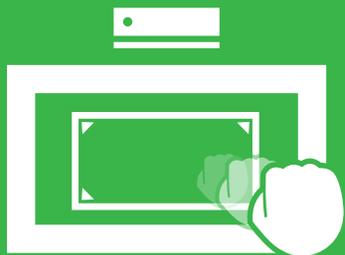


## Zoom in and zoom out

Use with Internet Explorer and other specialized apps. Hold a hand out in front of you, clench your fist to “grip” the picture and extend your arm, moving closer to the screen to zoom in, pulling back to zoom out.

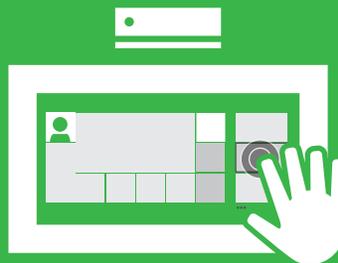

## Making a selection

Hold one hand out in front of you. Select an item on screen by simply pressing your open hand forward or “tapping” the item with your fingers.

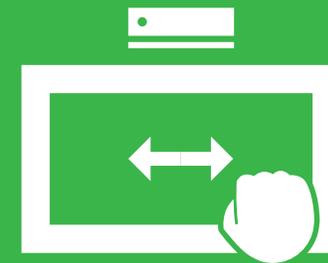

## Grip and hold

Hold one hand out in front of you. Close your hand to “grip” the screen and scroll horizontally.



## System Commands

<b>Xbox on</b>	Wakes up Xbox One, turns on television and cable/satellite set-top box
<b>Xbox turn off</b>	Puts Xbox One to sleep/off, can turn off television and cable/satellite set-top box
<b>Xbox</b>	Shows menu of global voice command options and begins listening for the next command
<b>Xbox select</b>	Shows voice command options for everything on the screen that are supported. Shows channel shortcuts during full screen TV viewing
<b>Stop listening</b>	Stops Kinect from listening or cancels voice commands if Kinect is triggered during casual conversation
<b>Xbox help</b>	Shows help menu with available options

<b>Xbox use a code</b>	Triggers Kinect code scanning for QR codes
<b>Xbox show notification</b>	Shows on-screen notification(s)
<b>Identity</b>	
<b>Xbox sign in/out</b> <b>Xbox sign in as [person]</b>	Signs in/out an Xbox Live member
<b>Gaming</b>	
<b>Xbox record that</b>	Records the previous 30 seconds of gameplay
<b>Xbox start a party</b>	Launches the Party app in Snap mode
<b>Volume</b>	
<b>Xbox volume up/down</b> <b>Xbox mute/unmute</b>	Controls volume of TV set
<b>Navigation and Multitasking</b>	
<b>Xbox go Home</b> <b>Xbox show my stuff</b>	Returns to Home
<b>Xbox go to [activity]</b>	Launches specific games, TV shows, apps, notifications and sections of the dash
<b>Xbox show menu</b>	In full screen: shows menu for whatever is on the screen. At Home: shows menu for whatever is in the current window
<b>Xbox go back</b>	Returns to previous screen or menu option
<b>Xbox Snap [app]</b>	Launches activity in Snap mode
<b>Xbox unsnap</b>	Unsnaps activity in Snap mode
<b>Xbox switch</b>	Switches control of the activities in Snap mode and Fill mode

## Communication

<b>Xbox Skype [person]</b> <b>Xbox call [person]</b>	Launches Skype call, must be a person from your Skype favorites list on your Xbox One
<b>Xbox answer/answer without video</b>	Answers incoming Skype call
<b>Xbox hang up</b>	Ends Skype call
<b>Xbox send a message</b>	Sends message to your Xbox Live friends
<b>TV</b>	
<b>Xbox watch TV</b>	Launches cable or satellite TV from set-top box
<b>Xbox watch [channel]</b>	Changes cable or satellite TV to specific channel when channel shortcuts are showing
<b>Xbox show guide</b> <b>Xbox OneGuide</b>	Launches OneGuide for cable or satellite TV subscribers

## Transport Controls

<b>Xbox play/stop/pause/fast forward/rewind/faster/slower/skip forward/skip backward/next song/previous song</b>	Transport controls for media playback, play and pause also work for gameplay
<b>Xbox play [music/video]</b>	Launches video and music playback

## Bing and Internet Explorer

<b>browse to [website]</b>	Browses to the specific website when in Internet Explorer
<b>Xbox Bing [name]</b>	Launches Bing and searches for the specific item(s)